

### Product Code

**UTC-0510 Concrete Flow Table Test Set**  
**UTC-0512 Flow Cone for UTC-0510 UTC-**  
**0513 Wooden Tamper 40x40x335 mm**

### Standards

EN 12350-5


The test set is used for concrete mixes of high workability and determines flow index as an arithmetic mean of the diameter of the specimen after working on a flow table.

The apparatus consists of a double steel table, an upper table measuring 700x700 mm and hinged at one side to the lower table. The top table is inscribed and all parts are protected against corrosion.

The stainless steel cone has a  $130 \pm 2$  mm top diameter,  $200 \pm 2$  mm base diameter and  $200 \pm 2$  mm height and 1.5 mm thickness.

The Concrete Flow Table is supplied complete with

- Flow Cone
- Wooden Tamper

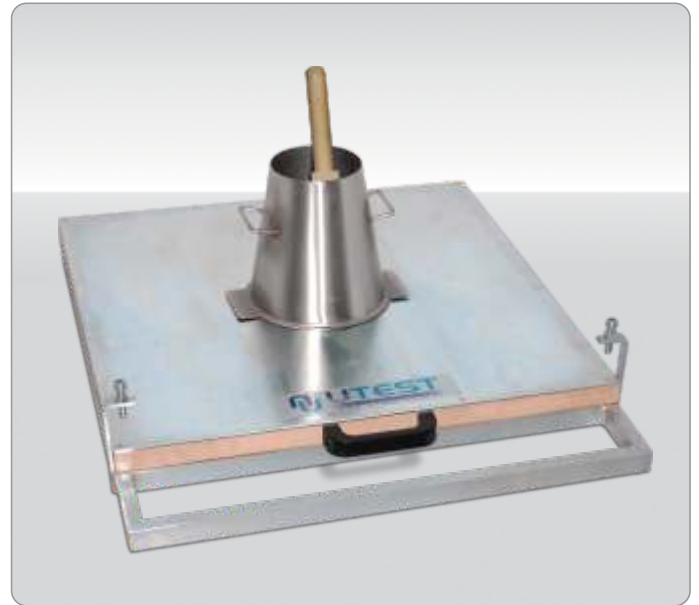

Dimensions	700x850x300 mm
Weight (approx.)	40 kg